



# Rain Gauge Connection Guide for MeteoHelix®



4 3 2 1  
↑ ↑

Connect the 2 wire leads of the rain gauge cable to terminals 3 & 4 and reassemble the rain gauge.

Rain gauge circuit board can be accessed by opening the bottom cover of the SEB rain gauges and unscrewing the screw on the side wall.

